

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05003 (A/B-TYPE)

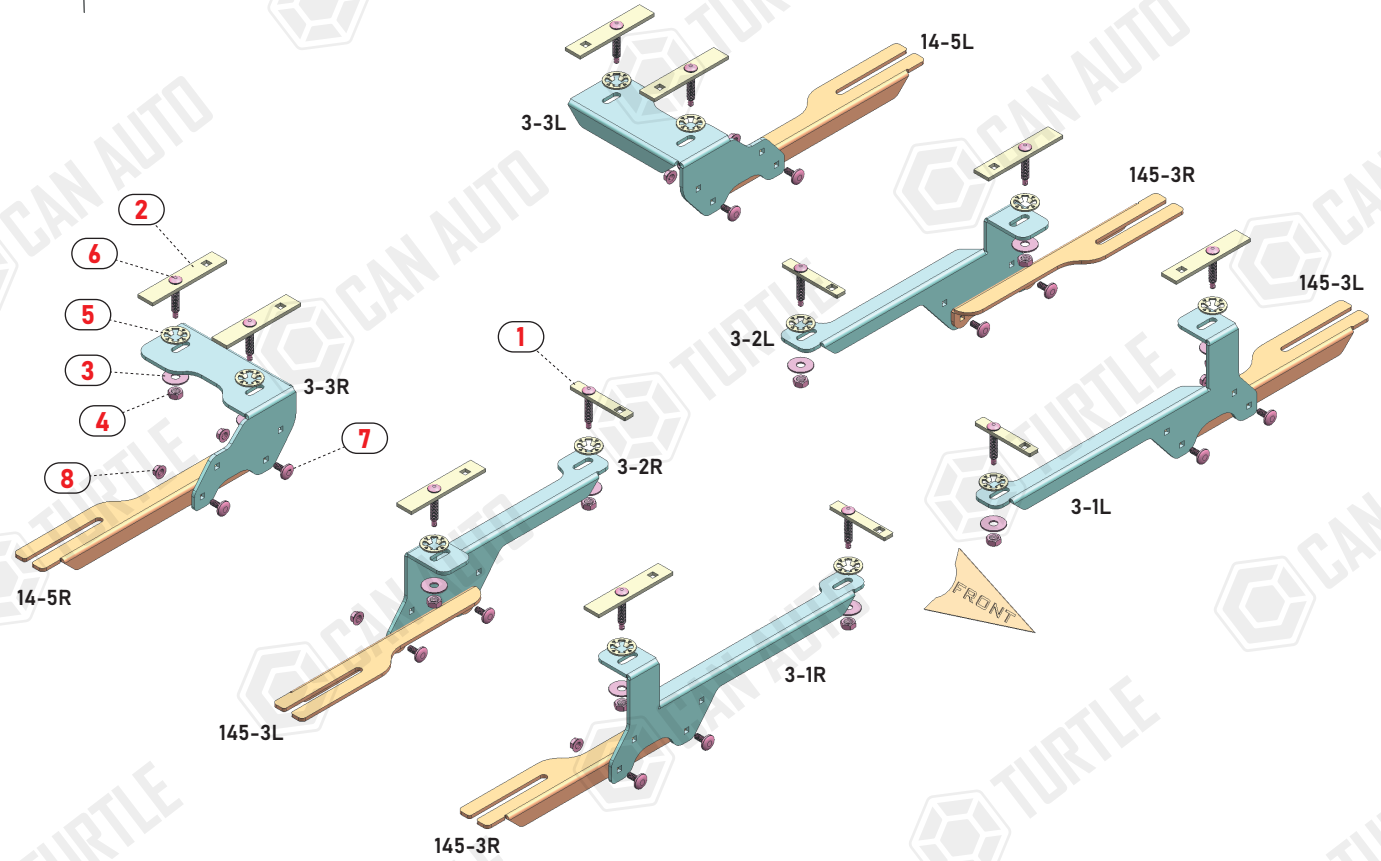
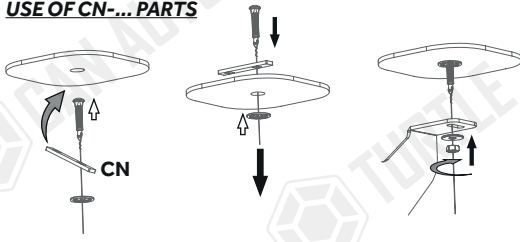
COMPATIBLE VEHICLES

AUD Q3 (8U) 12-18

PACKAGE INCLUDED

1-	CN-01 M8	4
2-	CN-03 M8	8
3-	D8 WASHER	12
4-	M8 HEX NUT	12
5-	CLAMPING PIECE	12
6-	M8 SPECIAL BOLT	12
7-	M6x15 LOCK HEADED BOLT	12
8-	M6 HEX FLANGE NUT	12

ZIPLOCK BAG

USE OF CN-... PARTS

Whatever product type you will use, Example of side step types:

*Type A (Alyans, Sapphire, Emerald)**Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)*

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****MIDDLE****FRONT**