

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05019 (A/B-TYPE)

COMPATIBLE VEHICLES

DAC DSTR 10-17

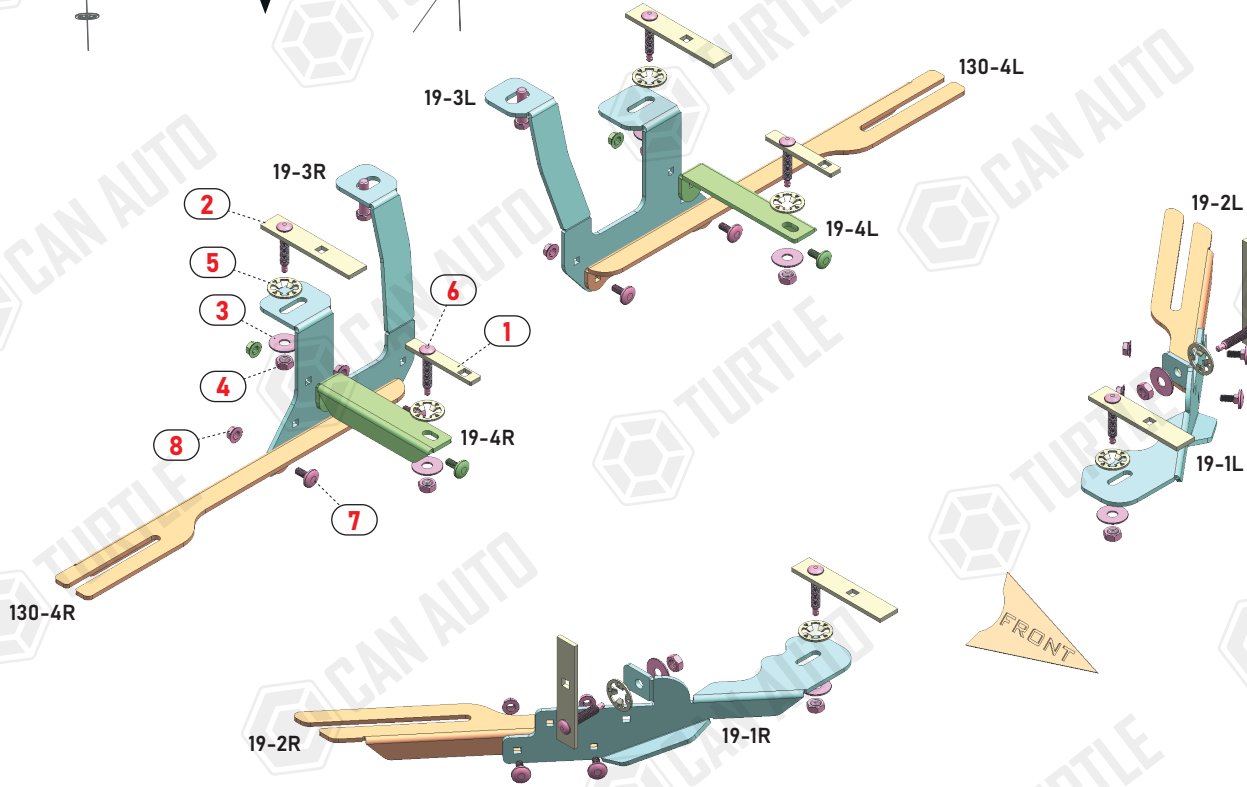
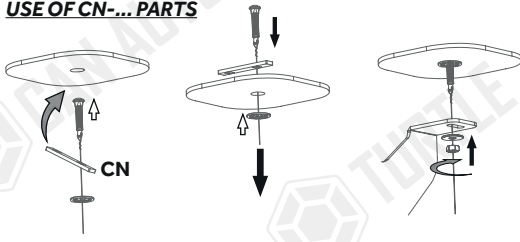
NSS TRRN 14-

REN DSTR 10-17

PACKAGE INCLUDED

1-	CN-01 M8	2
2-	CN-03 M8	6
3-	D8 WASHER	8
4-	M8 HEX NUT	8
5-	CLAMPING PIECE	8
6-	M8 SPECIAL BOLT	8
7-	M6x15 LOCK HEADED BOLT	10
8-	M6 HEX FLANGE NUT	10

ZIPLOCK BAG

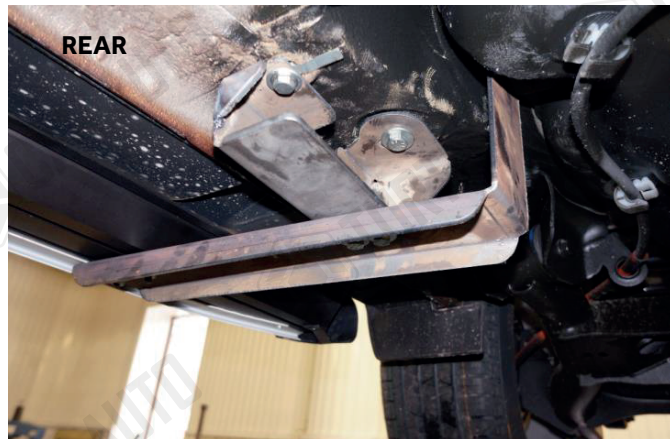
USE OF CN-... PARTS

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)*Type B* (Brilliant, Another, Pearl, Ring, Plus) / *Type E* (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****FRONT**