

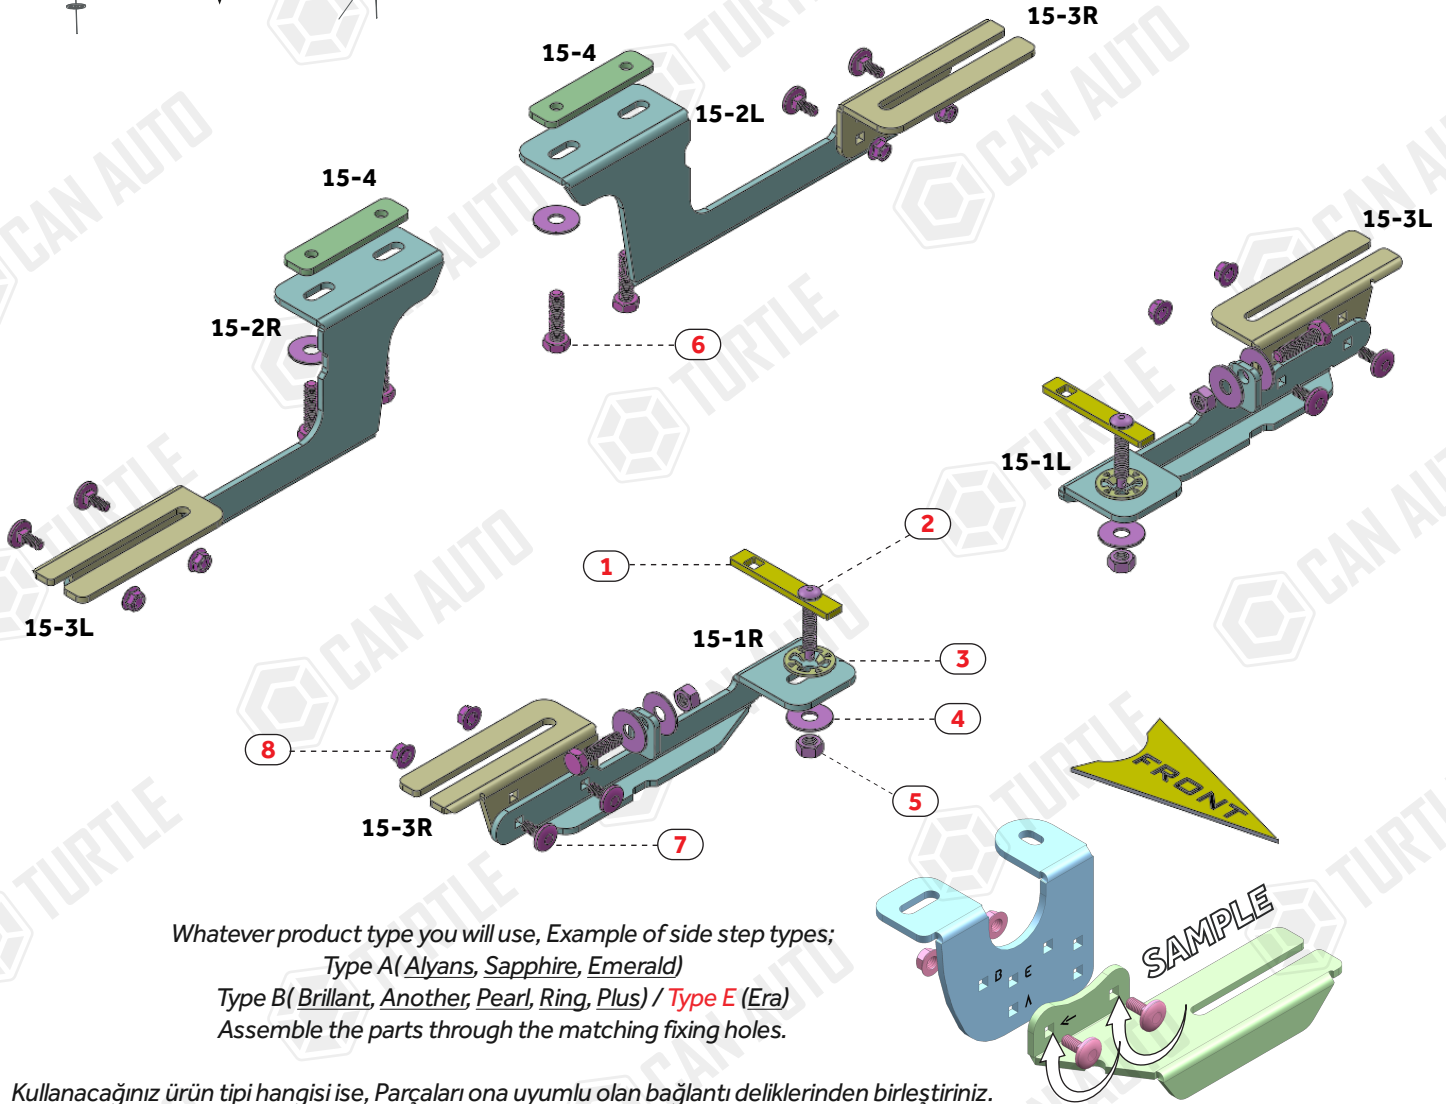
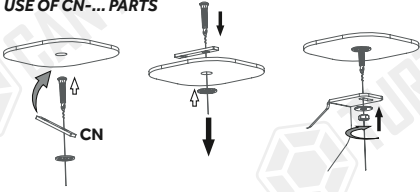
**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB06015 (B/E-TYPE)**COMPATIBLE VEHICLES**
CTR N BRLNG VAN 08-18
PEU TPE PRTNR VAN 08-18**PACKAGE INCLUDED**

1- CN-01 M8	2
2- M8 SPECIAL BOLT	2
3- CLAMPING PIECE	2
4- D8 WASHER	10
5- M8 HEX NUT	4
6- M8x30 HEX BOLT	6
7- M6x15 LOCK HEADED BOLT	8
8- M6 HEX FLANGE NUT	8

ZIPLOCK BAG

USE OF CN-... PARTS

Whatever product type you will use, Example of side step types;
Type A (Alyans, Sapphire, Emerald)
Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)
Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.



MB06015 / Rev.00 / 01.02.2022 (KRST)