

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION


ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05103 (A/B-TYPE)

COMPATIBLE VEHICLESSYNG ACTY SUV 06-10
SYNG ACTY SPORTS DOUBLE CAB 06-10
SYNG KYR SUV 06-15**PACKAGE INCLUDED**

1- CN-01 M8	2
2- CN-03 M8	4
3- D8 WASHER	14
4- M8 HEX NUT	10
5- D8 CLAMPING PIECE	6
6- M8 SPECIAL BOLT	6
7- M8x30 HEX BOLT	4
8- M6x15 LOCK HEADED BOLT	12
9- M6 HEX FLANGE NUT	12

ZIPLOCK BAG

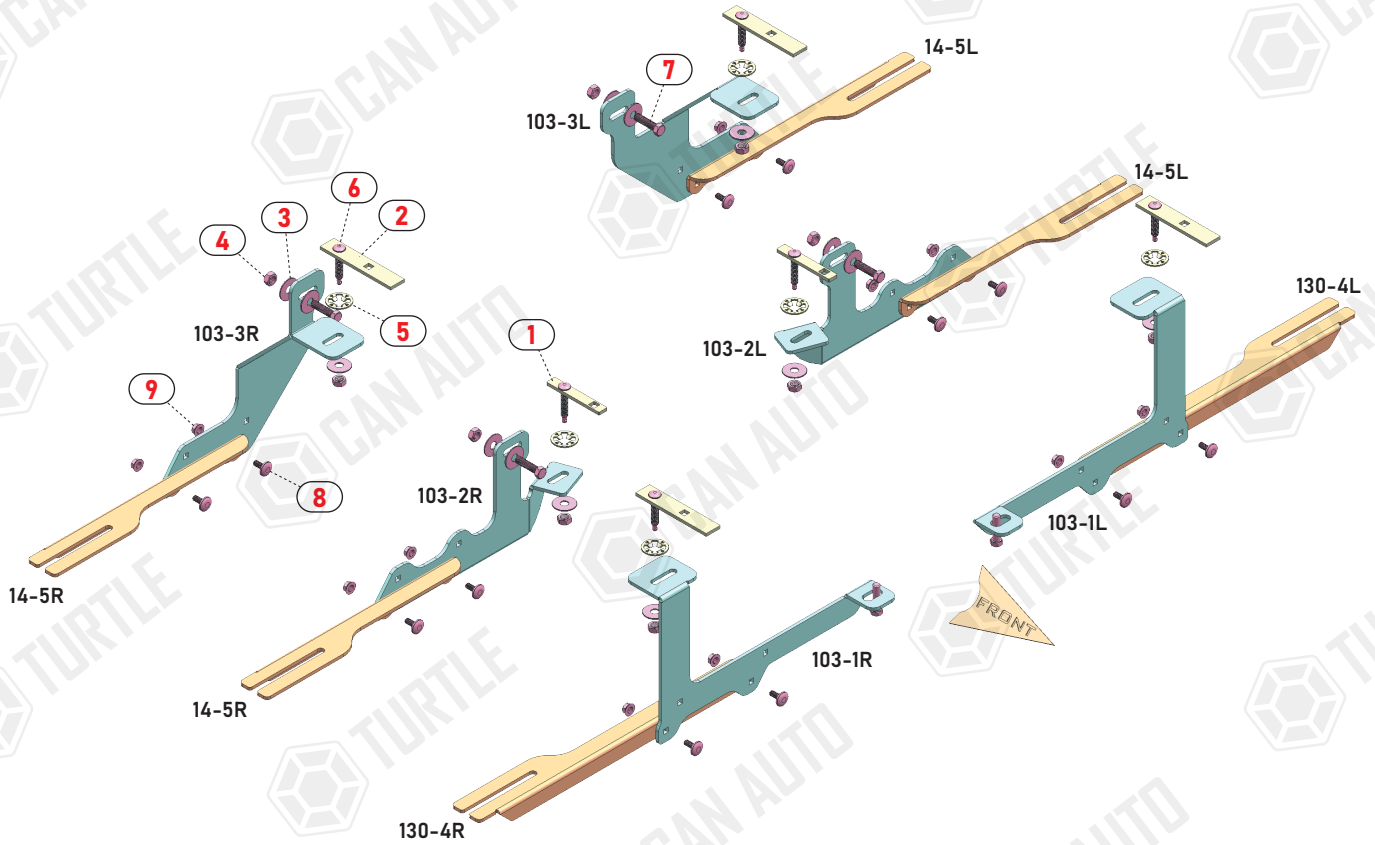


Whatever product type you will use, Example of side step types:

Type A (Alyans, Sapphire, Emerald)*Type B* (Brilliant, Another, Pearl, Ring, Plus) / *Type E* (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

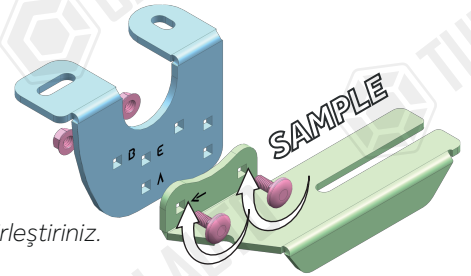

MB05103 / Rev.01 / 07.10.2021 (TPR)