

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

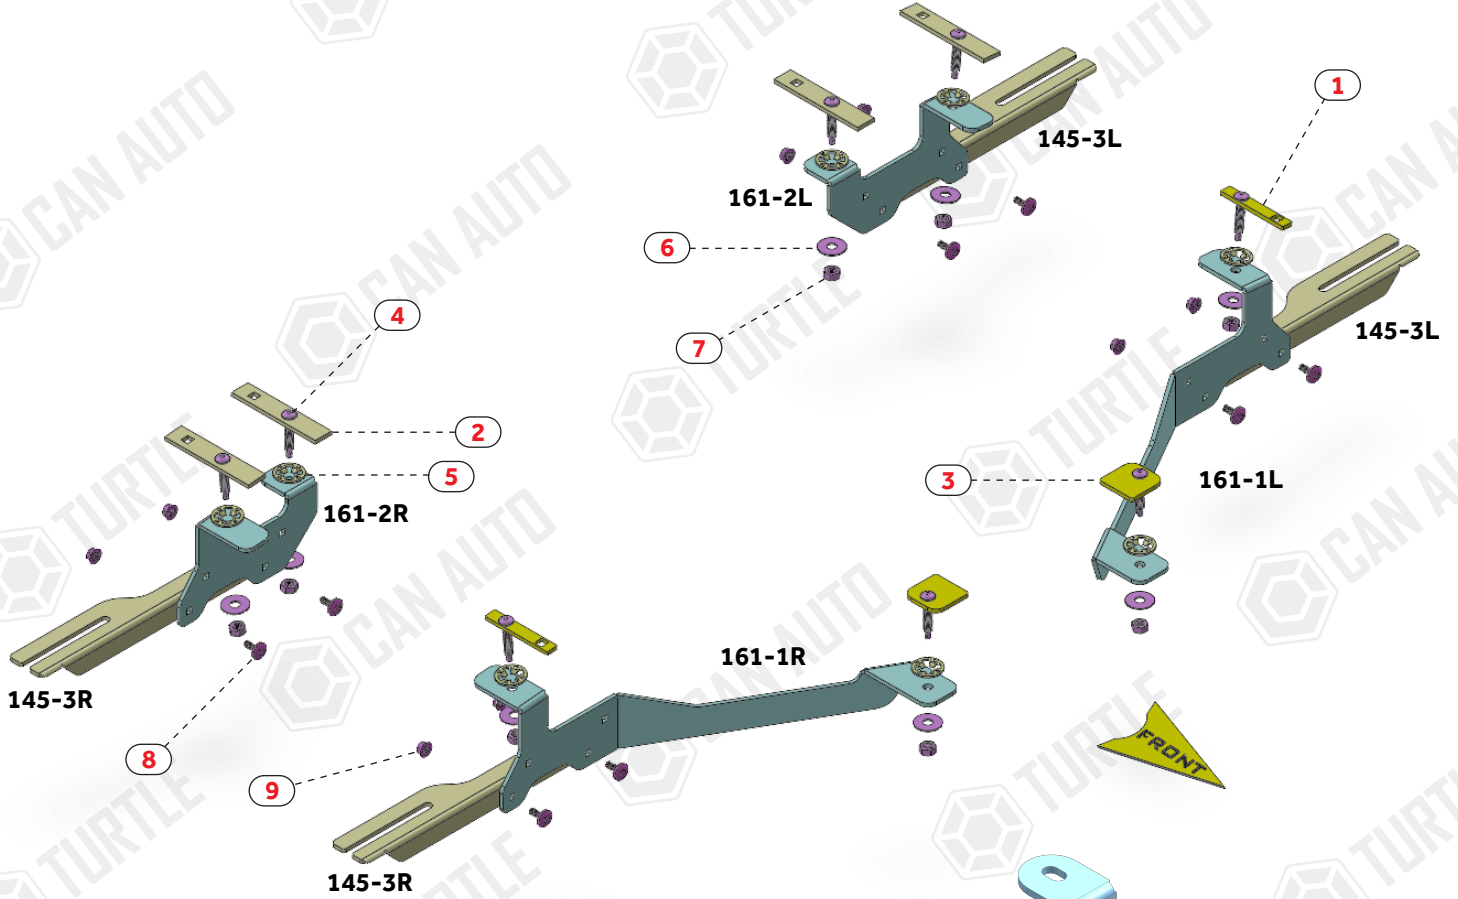
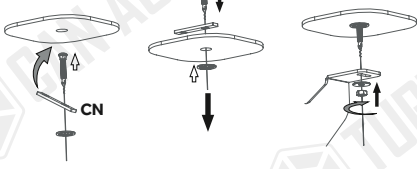
* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05161 (A/B-TYPE)**COMPATIBLE VEHICLES**
CPR FRMNR SUV 20-**PACKAGE INCLUDED**

1- CN-01 M8	2
2- CN-03 M8	4
3- CN-07 M8	2
4- M8 SPECIAL BOLT	8
5- CLAMPING PIECE	8
6- M8 WASHER	8
7- M8 HEX NUT	8
8- M6x15 LOCK HEADED BOLT	8
9- M6 HEX FLANGE NUT	8

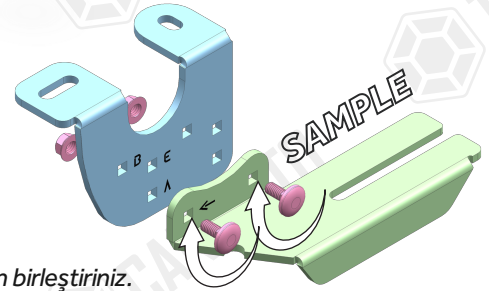
ZIPLOCK BAG

USE OF CN-... PARTS

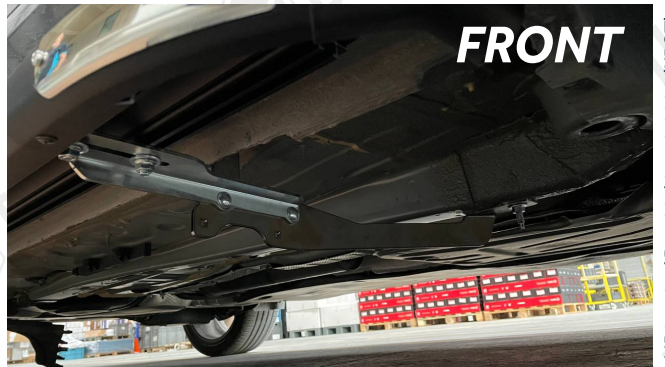
Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)**Type B** (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.



Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

**REAR****FRONT**

MB05161 / Rev.00 / 05.10.2022 (KRST)