

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

\* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

\* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

\* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

**ASSEMBLY INSTRUCTIONS (BRACKET KIT)**

Product Code: MB05110 (A/B-TYPE)


**COMPATIBLE VEHICLES**

SZK GVTR (JT) SUV 05-14

**PACKAGE INCLUDED**

|    |                        |    |
|----|------------------------|----|
| 1- | M8x25 HEX BOLT         | 14 |
| 2- | D8 WASHER              | 14 |
| 3- | M6x15 LOCK HEADED BOLT | 12 |
| 4- | M6 HEX FLANGE NUT      | 12 |
| 5- | M8x20 LOCK HEADED BOLT | 2  |
| 6- | M8 HEX FLANGE NUT      | 2  |

ZIP LOCK BAG

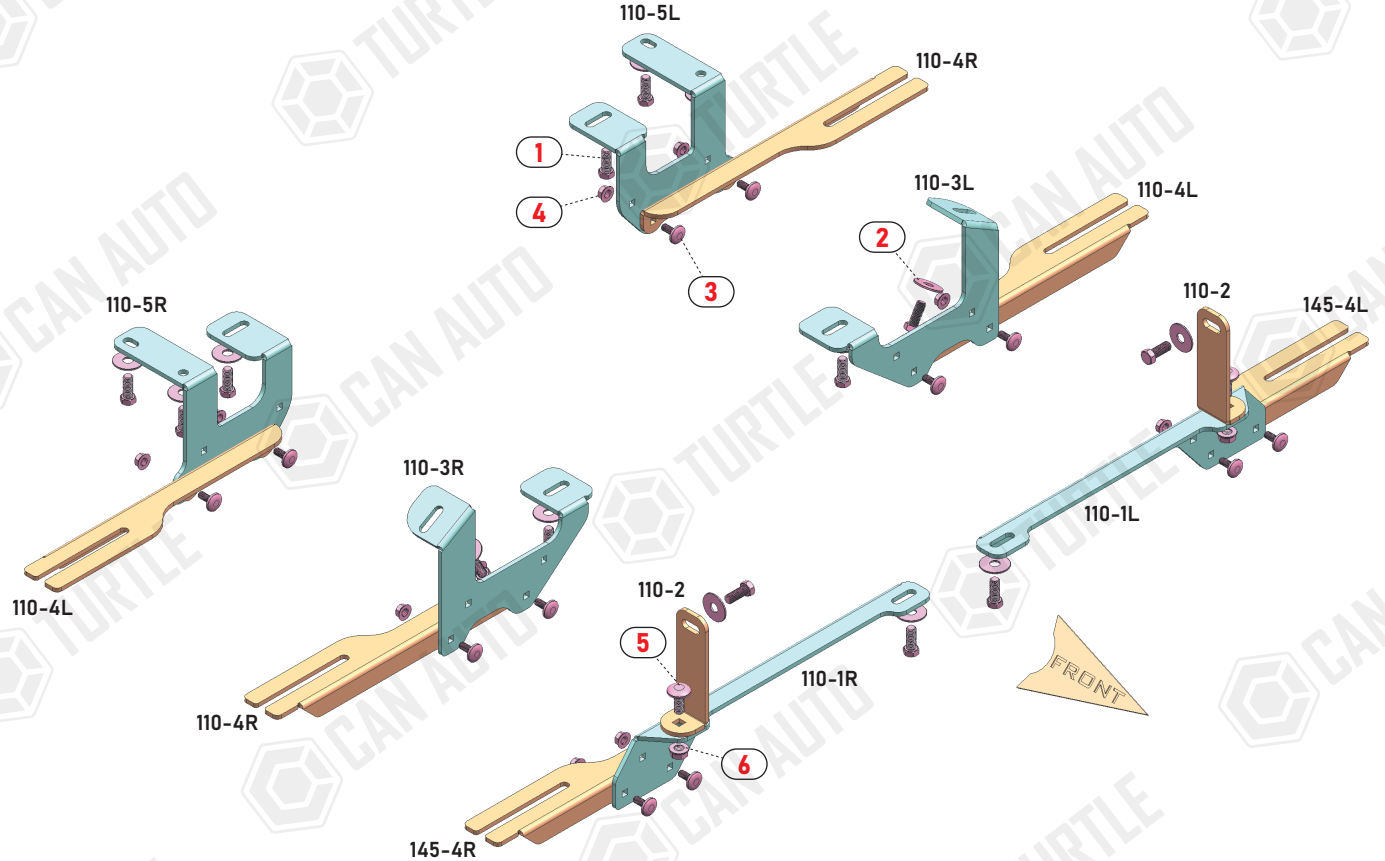


Whatever product type you will use, Example of side step types:

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

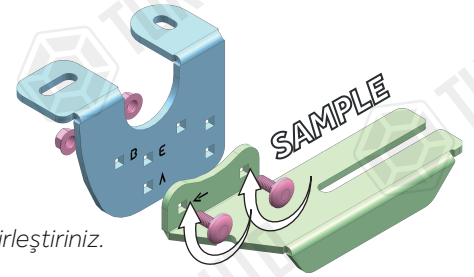

MB05110 / Rev.01 / 03.10.2021 (TPRK)