



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01050 (A TYPE)

MB02050(B TYPE)

COMPATIBLE VEHICLES

HYN IX-5 LM SUV 10-15

KI SPRTG SL SUV 10-15






FIRST TIME INSTALLATION

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

USE OF CN-... PARTS

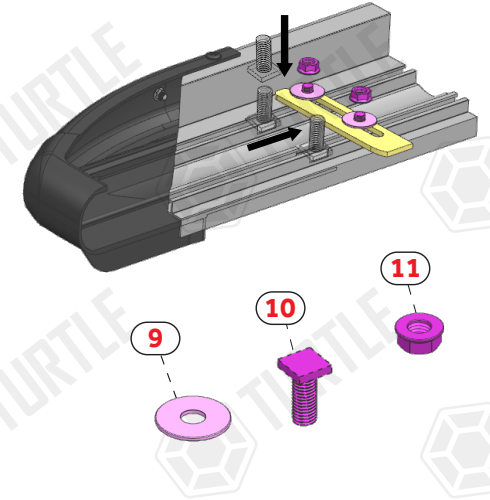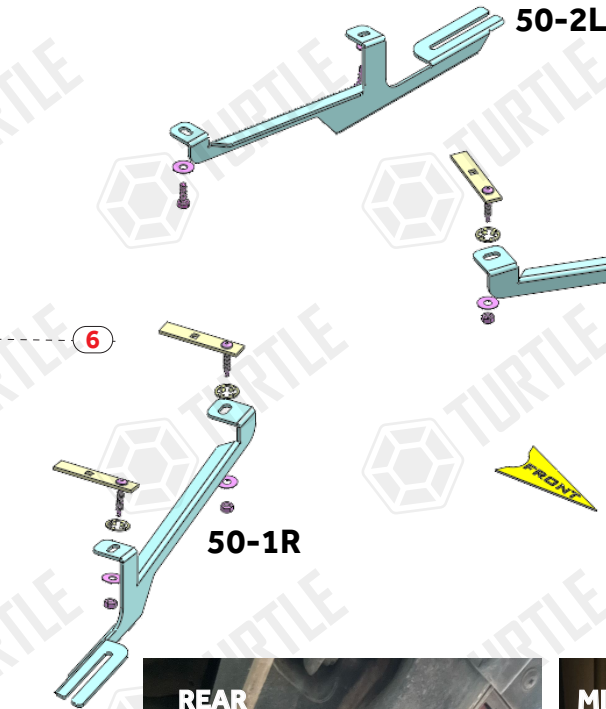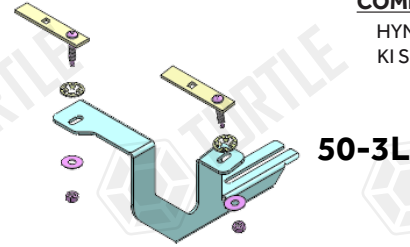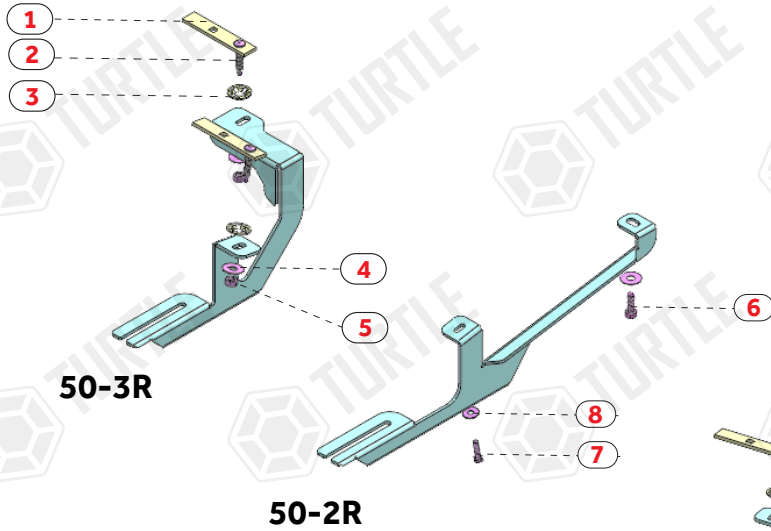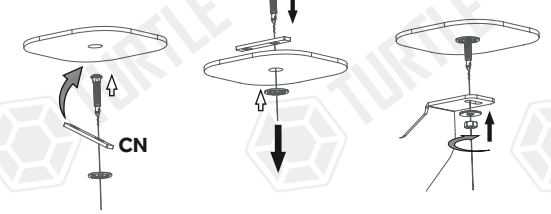

PACKAGE INCLUDED

1- CN-03 M8	8	ZIP LOCK BAG
2- M8 SPECIAL BOLT	8	
3- CLAMPING PIECE	8	
4- M8 WASHER	10	
5- M8 HEX NUT	8	
6- M8x25 HEX BOLT	2	
7- M6x20 HEX BOLT	2	
8- M6 WASHER	2	
9- D8 WASHER	12	ZIP LOCK BAG
10- M8x20 SQUARE BOLT	12	
11- M8 FLANGE NUT	12	

