

**CAN AUTO****TURTLE****FIRST TIME INSTALLATION**

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL


* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (BRACKET KIT)
Product Code: MB05061 (A/B-TYPE)**COMPATIBLE VEHICLES**
KI SRNT (BL) SUV 02-09**PACKAGE INCLUDED**

1- M12 U STUD BOLT	4
2- D12 WASHER	8
3- M12 HEX NUT	8
4- M6x15 LOCK HEADED BOLT	8
5- M6 HEX FLANGE NUT	8


ZIPLOCK BAG

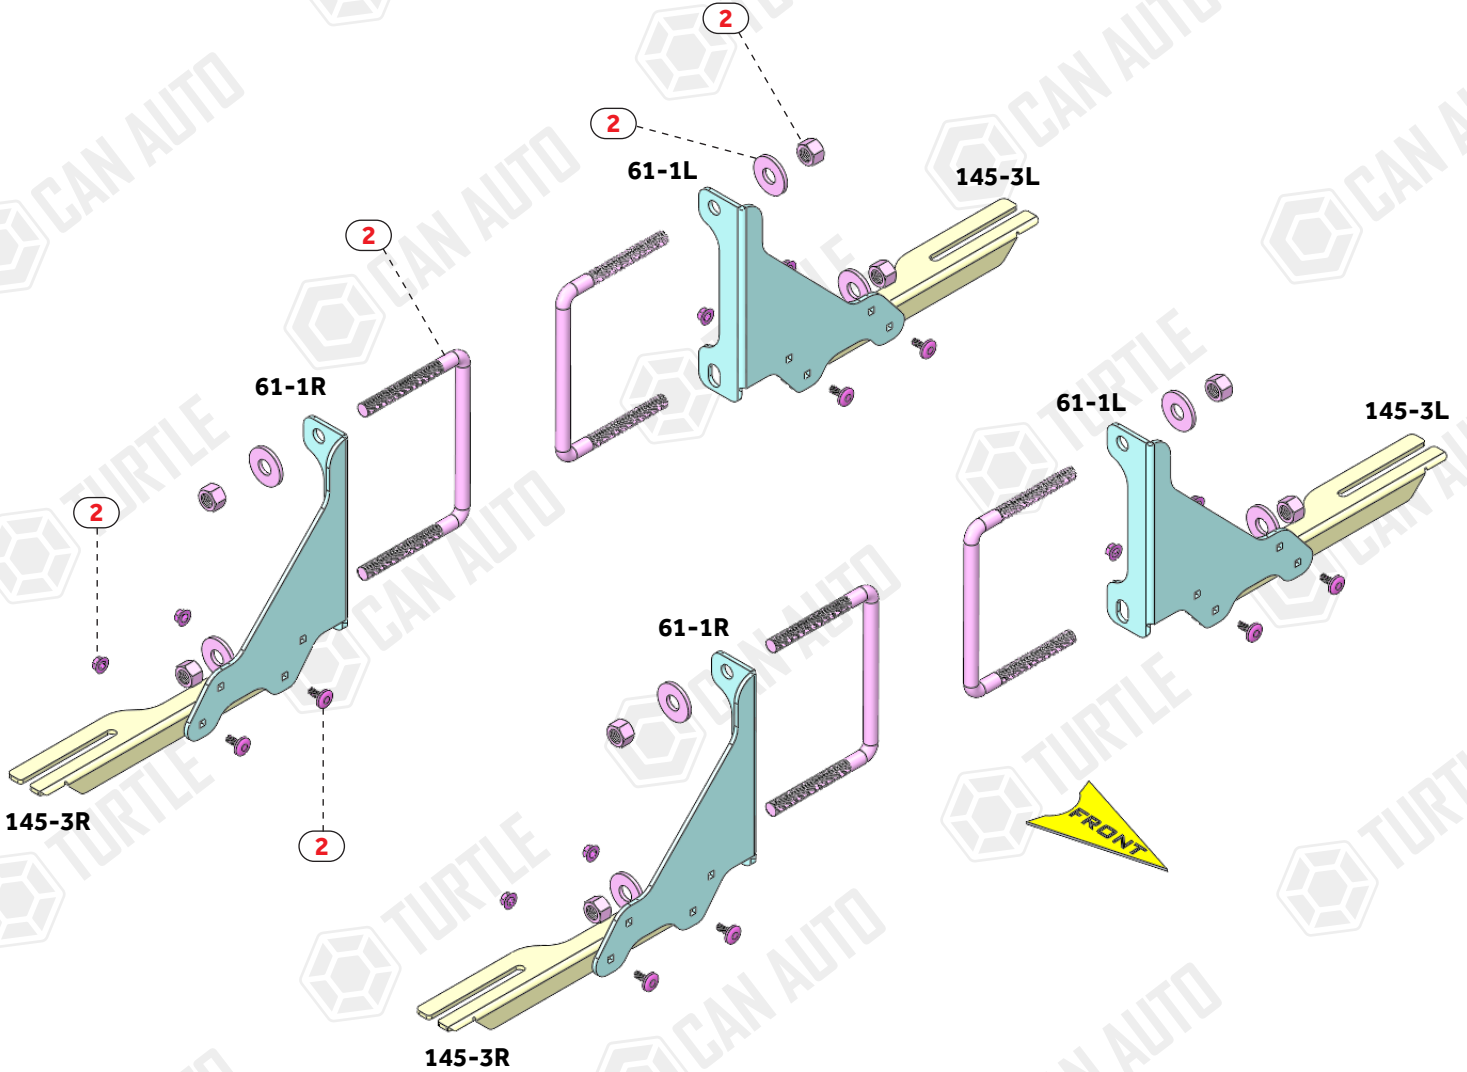

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)**Type B** (Brillant, Another, Pearl, Ring, Plus) / **Type E** (Era)

Assemble the parts through the matching fixing holes.

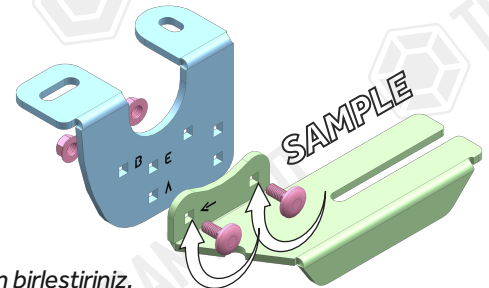

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.