



ASSEMBLY INSTRUCTIONS (BRACKET KIT)


Product Code: MB02029 (B TYPE)

COMPATIBLE VEHICLES



FRD CNNCT VAN02-12 / SWB
FRD CNNCT VAN02-12 / LWB

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

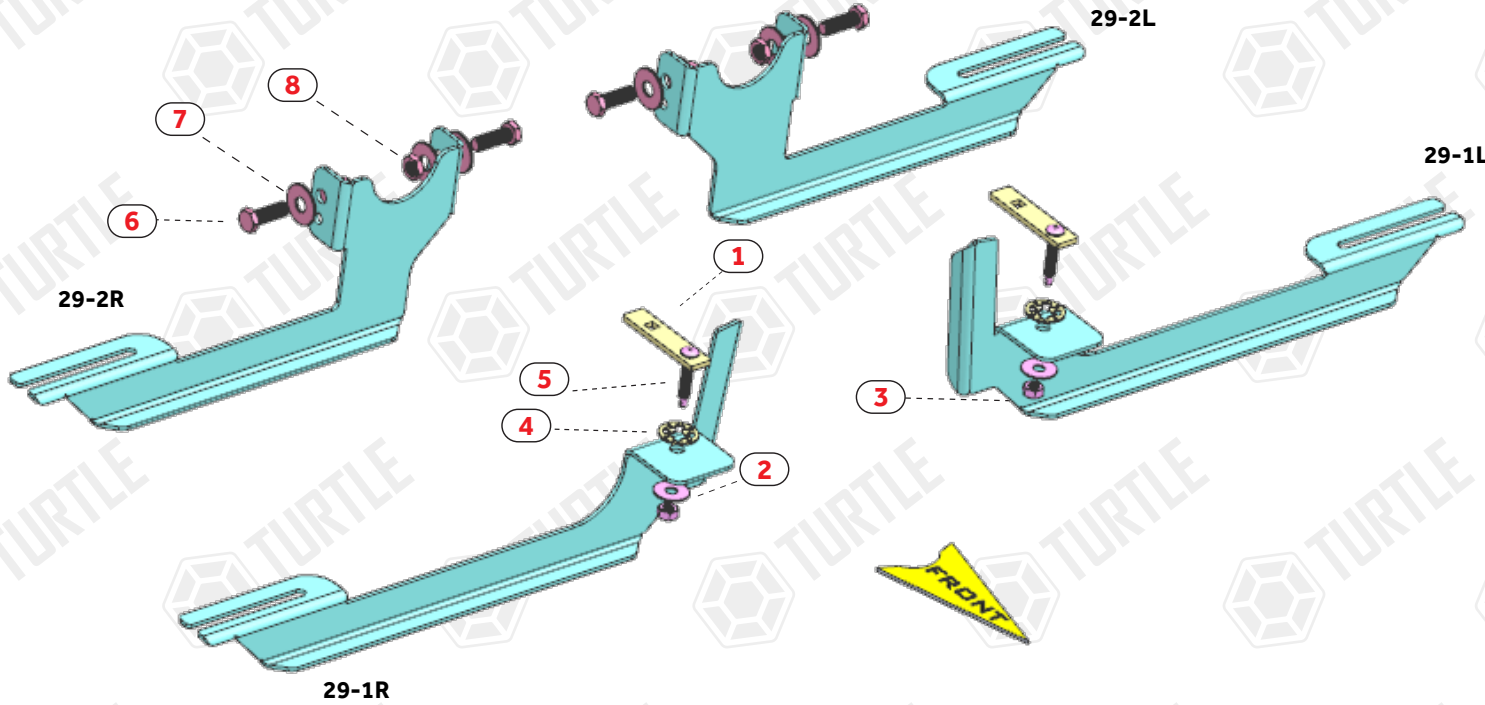

USE OF CN-... PARTS

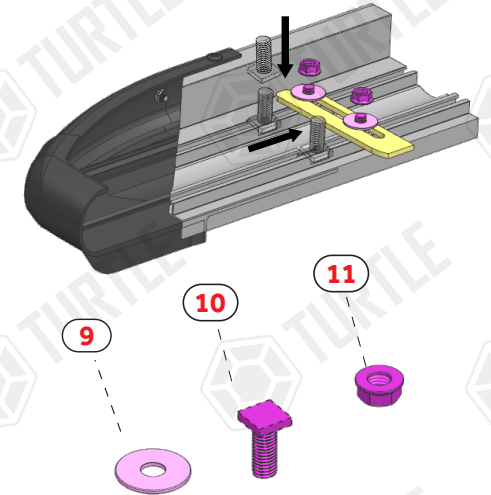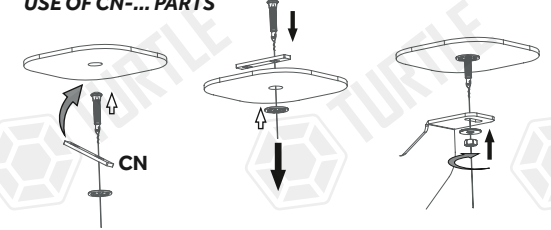

PACKAGE INCLUDED

1- CN-02 M8	2	ZIPLOCK BAG
2- D8 WASHER	2	
3- M8 HEX NUT	2	
4- CLAMPING PIECE	2	
5- M8 SPECIAL BOLT	2	ZIPLOCK BAG
6- M10X30 HEX BOLT	4	
7- D10 WASHER	8	
8- M10 HEX NUT	4	
9- D8 WASHER	8	
10- M8x20 SQUARE BOLT	8	
11- M8 FLANGE NUT	8	

