



ASSEMBLY INSTRUCTIONS (BRACKET KIT)


Product Code: MB02030 (B TYPE)

COMPATIBLE VEHICLES



FRD CNNCT VAN 13 / SWB
FRD CNNCT VAN 13 / LWB

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

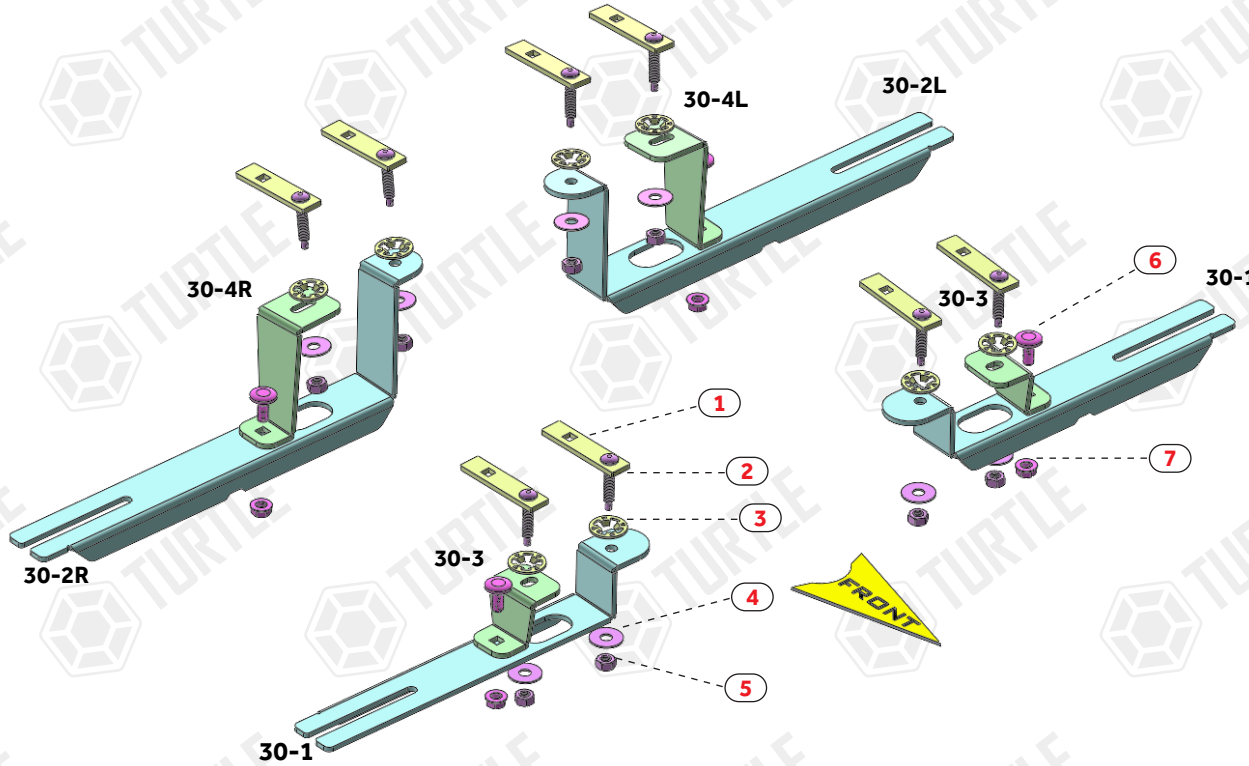

USE OF CN-... PARTS

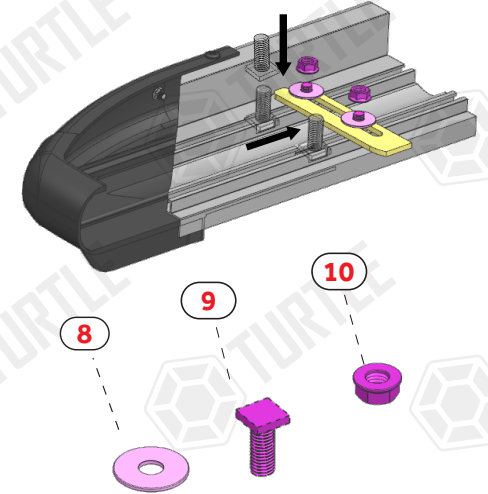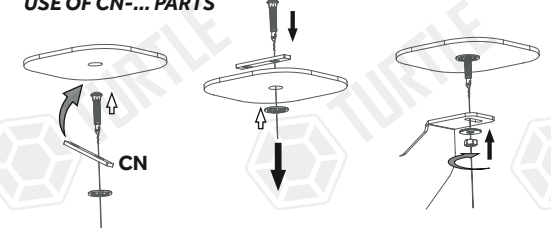

PACKAGE INCLUDED

1- CN-02 M8	8	ZIPLOCK BAG
2- M8 SPECIAL BOLT	8	
3- CLAMPING PIECE	8	
4- D8 WASHER	8	
5- M8 HEX NUT	8	
6- M8X20 LOCK HEADED BOLT	4	ZIPLOCK BAG
7- M8 HEX FLANGE NUT	4	
8- D8 WASHER	8	
9- M8x20 SQUARE BOLT	8	
10- M8 FLANGE NUT	8	

