



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB05118(A/B TYPE)




COMPATIBLE VEHICLES

TYT RV4 (XA30) 06-12
TYT RV4 (XA40) 13-18

FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

USE OF CN-... PARTS

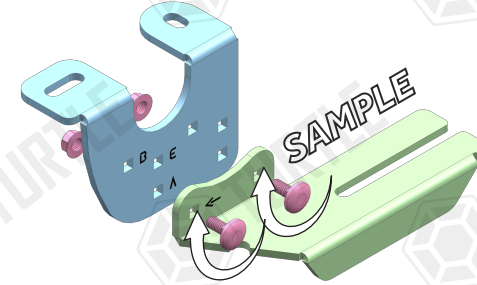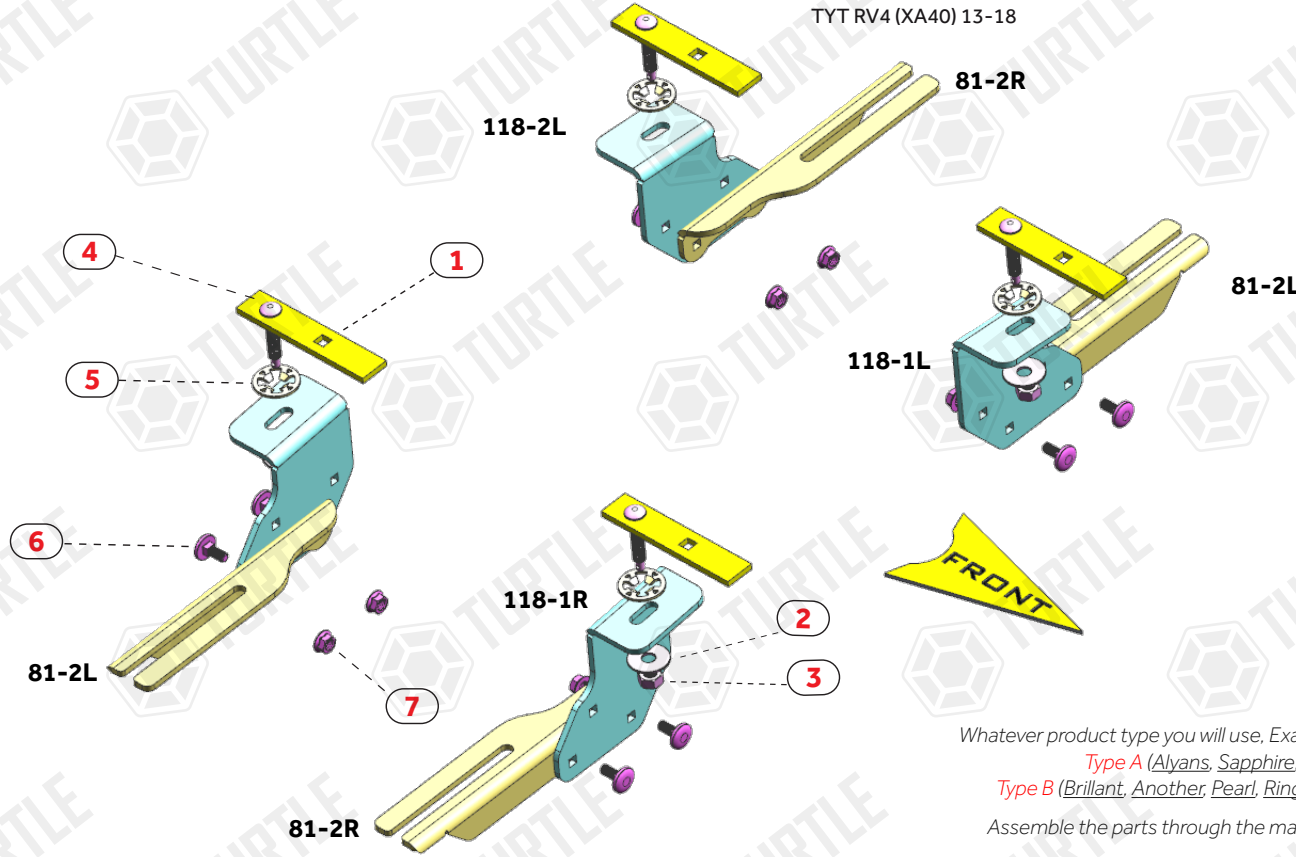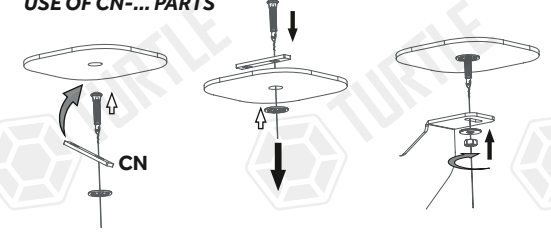

Whatever product type you will use, Example of side step types:

Type A (Alyans, Sapphire, Emerald)

Type B (Brilliant, Another, Pearl, Ring, Plus) / Type E (Era)

Assemble the parts through the matching fixing holes.

Kullanacağınız ürün tipi hangisi ise, Parçaları ona uyumlu olan bağlantı deliklerinden birleştiriniz.

PACKAGE INCLUDED

1- CN-03 M8	4
2- D8 WASHER	4
3- M8 HEX NUT	4
4- M8 SPECIAL BOLT	4
5- D8 CLAMPING PIECE	4
6- M6x15 LOCK HEADED BOLT	8
7- M6 HEX FLANGE NUT	8

ZIPLOCK BAG

REAR



FRONT

