



FIRST TIME INSTALLATION

- * REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL
- * CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED
- * USE THE EQUIPMENT SPECIFIED FOR INSTALLATION



ASSEMBLY INSTRUCTIONS (BRACKET KIT)

Product Code: MB01021 (A-TYPE)
MB02021 (B-TYPE)

COMPATIBLE VEHICLES

DAC SDR STPWY (B8) SUV 13-20
DAC SDR STPWY (B5) SUV 07-12

USE OF CN-... PARTS

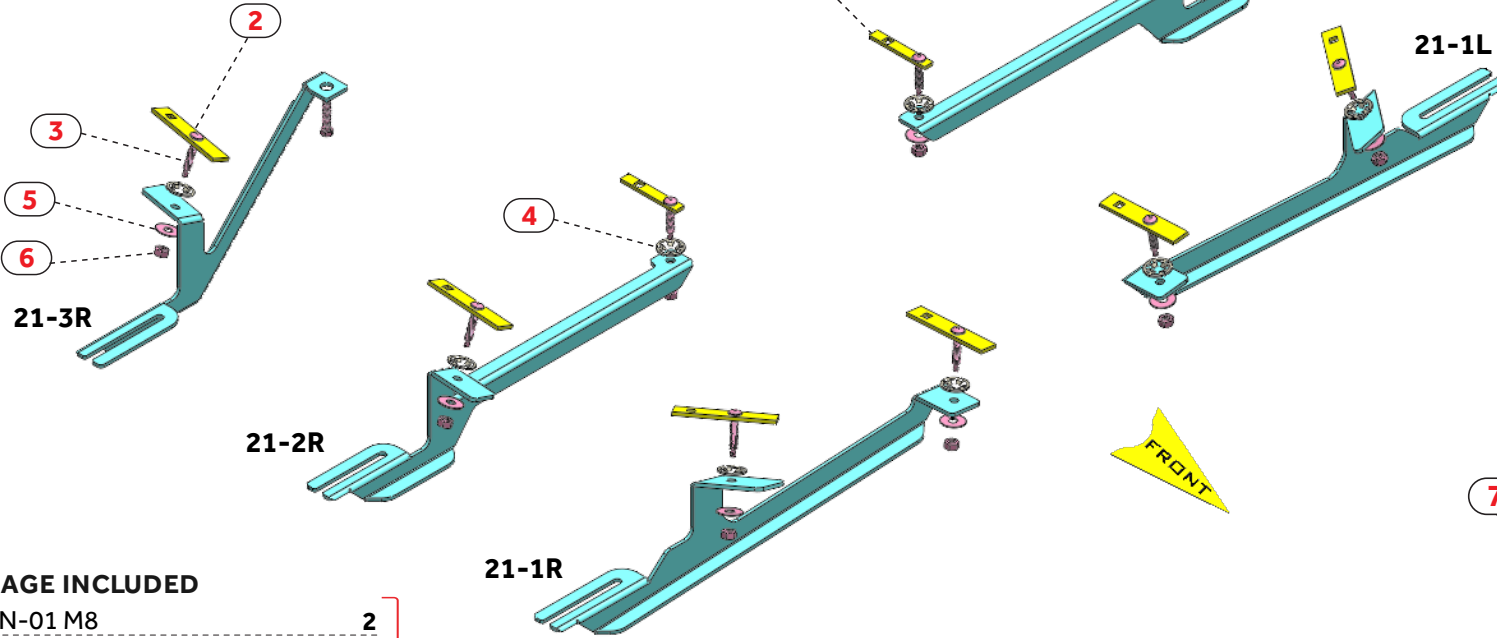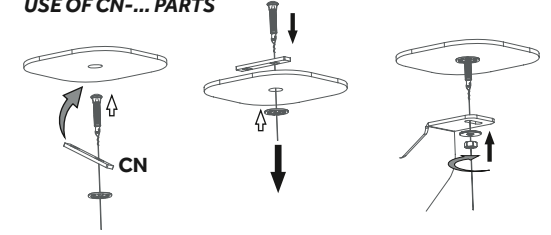

PACKAGE INCLUDED

1- CN-01 M8	2	ZIPLOCK BAG
2- CN-03 M8	8	
3- M8 SPECIAL BOLT	10	
4- CLAMPING PIECE	10	
5- D8 WASHER	10	ZIPLOCK BAG
6- M8 HEX NUT	10	
7- M8 WASHER	12	
8- M8x20 SQUARE BOLT	12	
9- M8 FLANGE NUT	12	

Whatever product type you will use, Example of side step types;

Type A (Alyans, Sapphire, Emerald)

Type B (Brillant, Another, Pearl, Ring, Plus) / Type E (Era)

* Aracın üzerinde mevcut olan civatayı belli etmektedir.

* It shows the bolt on the vehicle.

MB01021 / MB02021 / Rev.00 / 22.02.2024(AYSENUR)